

Notes:

- All screens in this guide are simulated. Actual displays may be different.
- Depend on the different software version on your E43xx, You may get different screens with same tasks.
- Unless specified otherwise, all instructions to perform tasks in this guide assume that you are starting from the home screen.

To know your Ex430xx more

the important keys & connectors

Front View



Back View




Index

Set up and Go	9
WiFi Connect	10
Touch icon and keys	11
How to use the touch	12
Smartphone status & notifications	15
Manage & restore apps	17
Messaging	18
Text entry	19
Photos & videos	20
Quick start: Music	21
Bluetooth™ hands-free devices	24


START

Please follow the E43xx QIG to set up E43xx


1. Make the Ex430xx facing down, and then unscrew the screws of Ex430xx.
2. Gently pull Ex430xx out of its back cover.

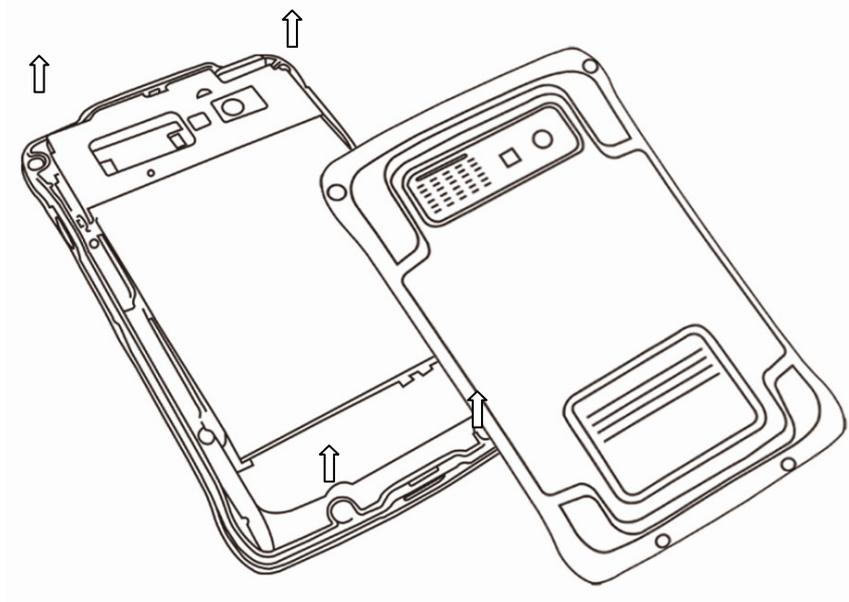


3. Pull the plastic strap, and then remove the battery.

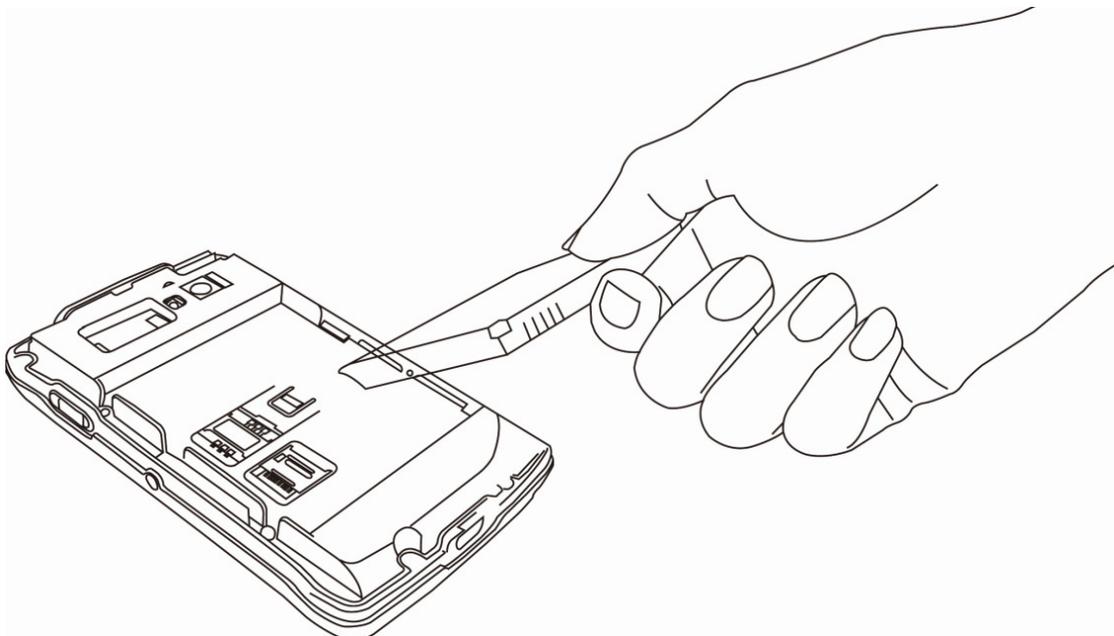


4. Insert the SIM card (with its gold contacts facing down and cut-off corner facing out) all the way into the SIM card slot.

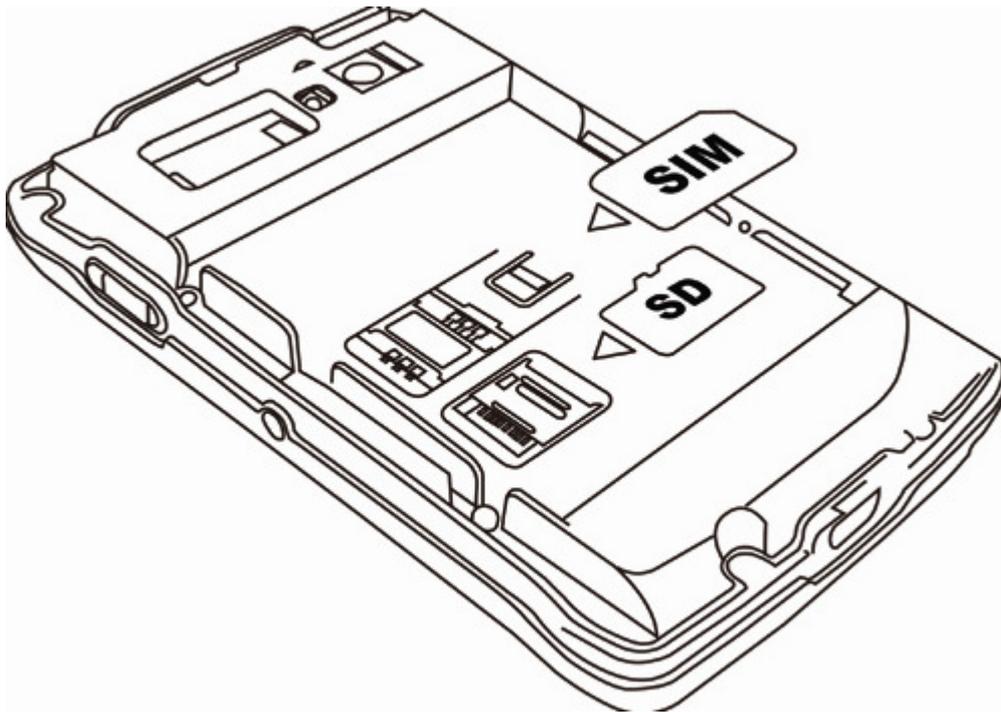


5. Push the metal cover backward and lift the metal cover. Then put the SD card into the socket, close the metal cover and push forward till click sound.

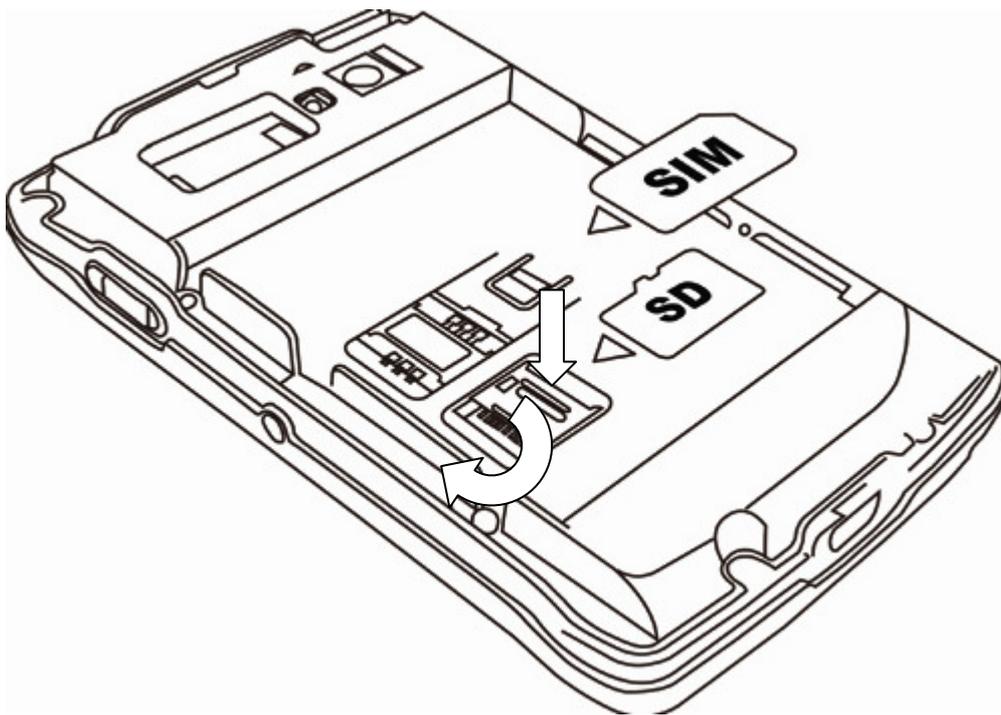


6. Reinsert the battery again.

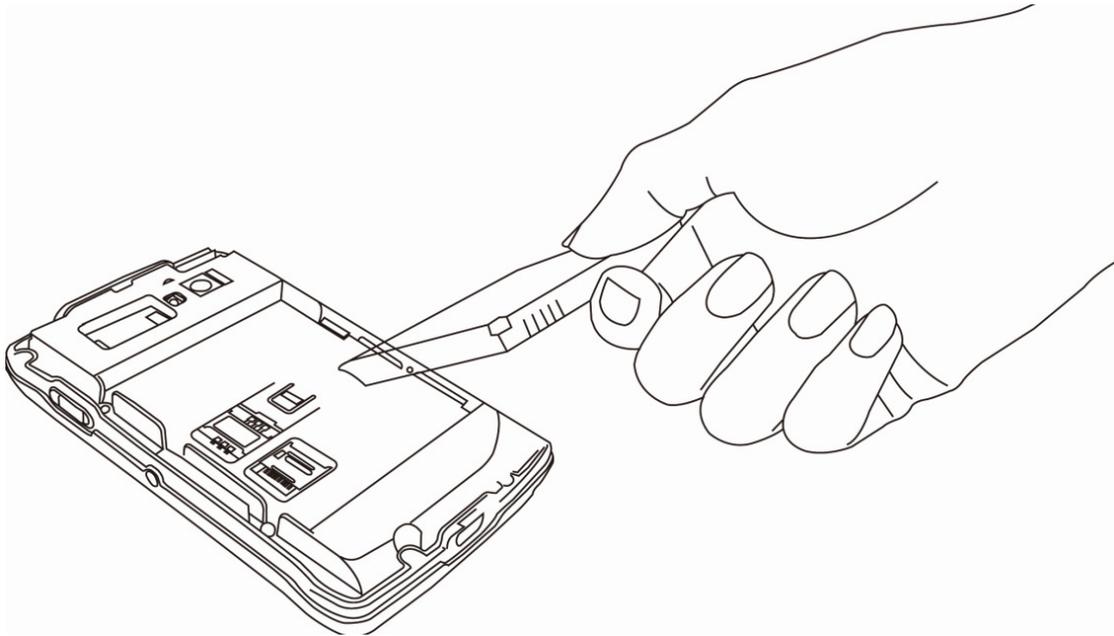

7. Fix the back cover with screws.

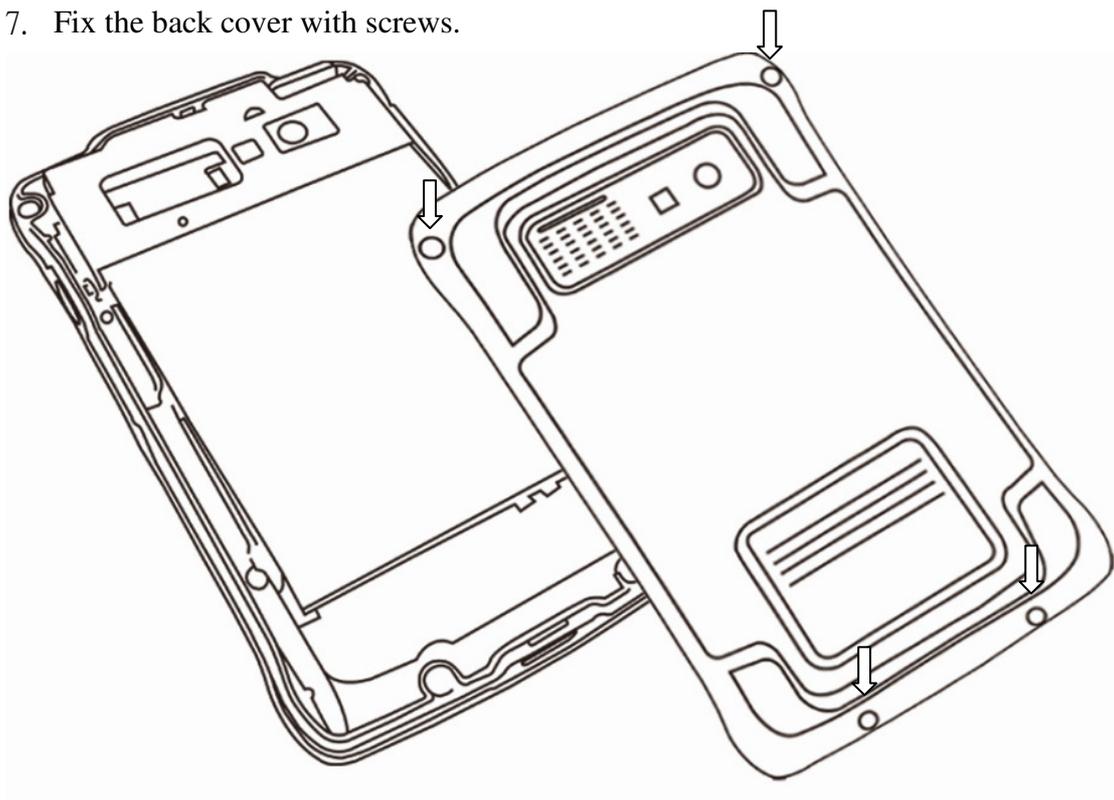


8. Use the supplied power adapter and USB cable to charge Ex430xx for 4hrs.

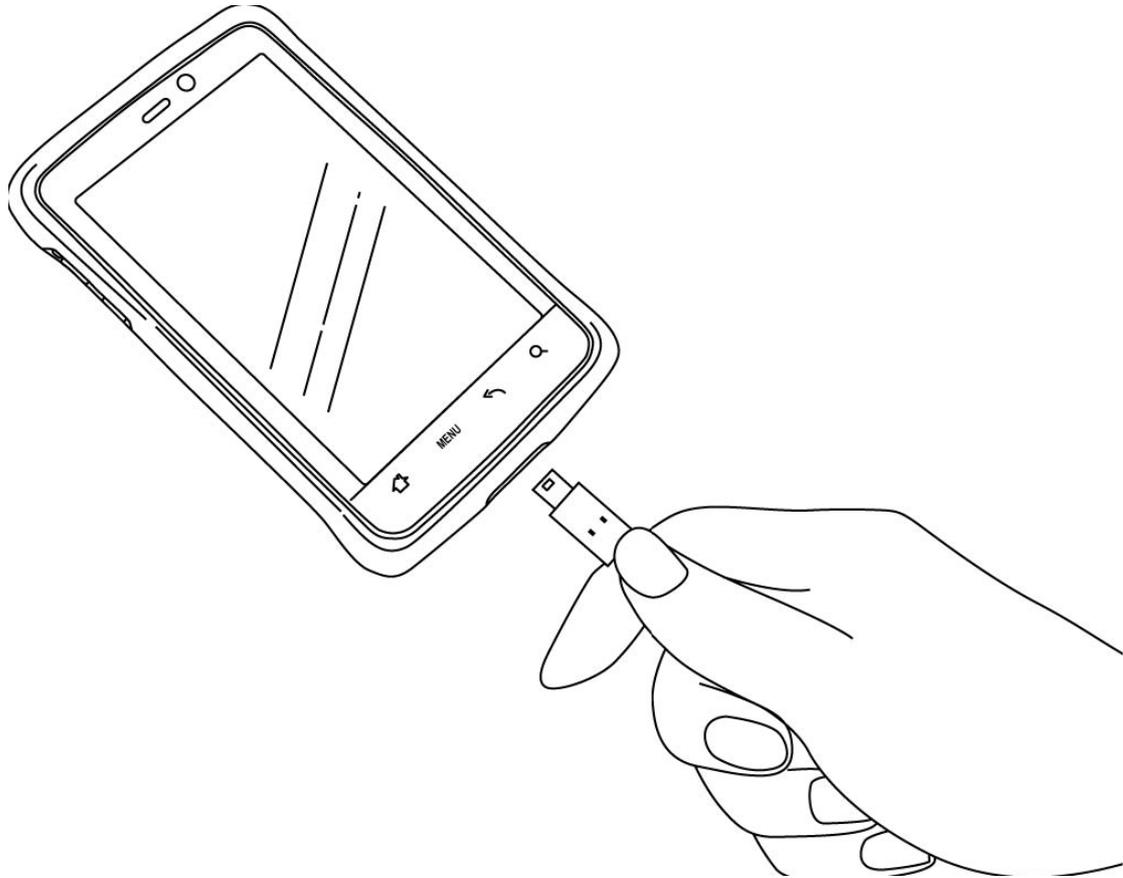


Note: This product uses a non-removable battery. The battery should only be removed when you want to changed SD card or SIM card.

Set up and Go

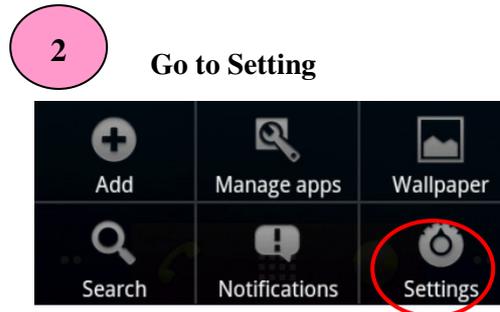

Note: Your E43XX supports 3G services. We strongly recommended that you purchase a 3G service that meets your needs in local area. Contact your local 3G service provider for details.

WiFi Connect

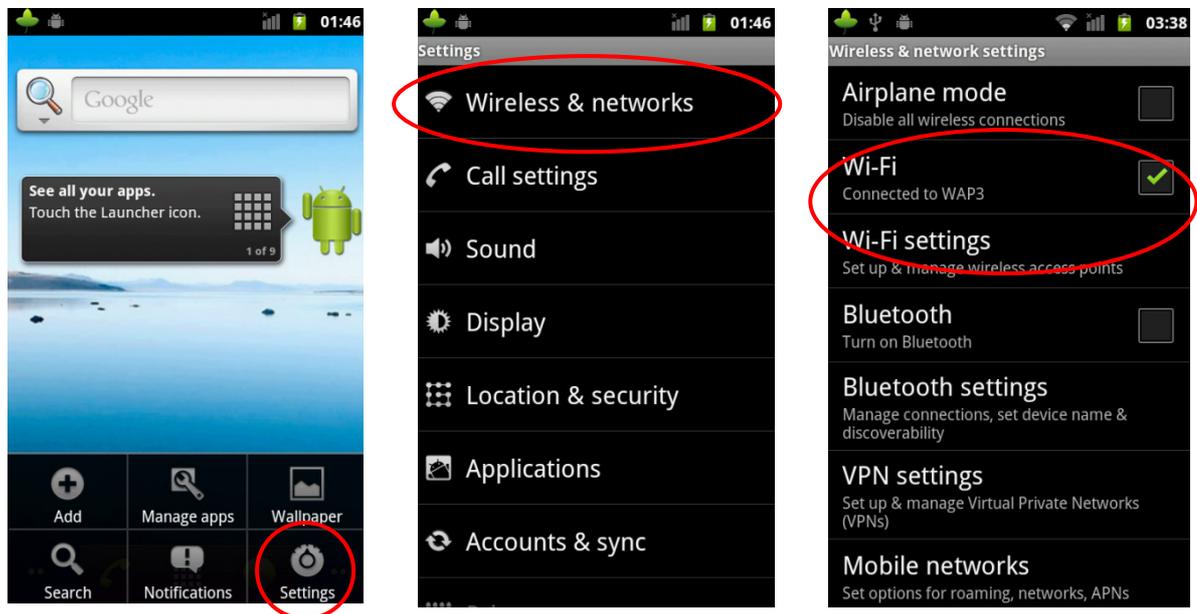

If you want to use a Wi-Fi network for even faster Internet access, touch the status bar at the top of the home screen and drag it down. Touch the **Wi-Fi networks available** notification to select a preferred network. You can also touch **Menu > Settings > Wireless & network setting > Wi-Fi settings** to search for and connect to wireless networks.

Touch icon and keys

a few essentials

Touch on and off

Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power Button on the right side. .
- When you hold the E43XX to your ear during voice transmit, your touchsensor sleeps to prevent accidental touches.
- To change how long your E43xx waits before the screen goes to sleep automatically, touch **MENU**> **Settings** > **Display** > **Screen timeout**.
- To make the screen lock when it goes to sleep, see "**Screen lock**" on page 51.

To unlock the screen, press Power , then drag  to the right.


Note: Your touchscreen might stay dark if the sensor just above it is covered.



Don't use covers or screen protectors (even clear ones) that cover this sensor.

How to use the touch

- **Touch:** Choose an icon or option.
- **Long Touch:** Show options.
- **Drag:** Scroll or move slowly.
- **Turn Page:** Scroll or move quickly.
- **Zoom in / out:** Slide fingers apart or together to zoom in or out on Google Maps™, web pages or photos.

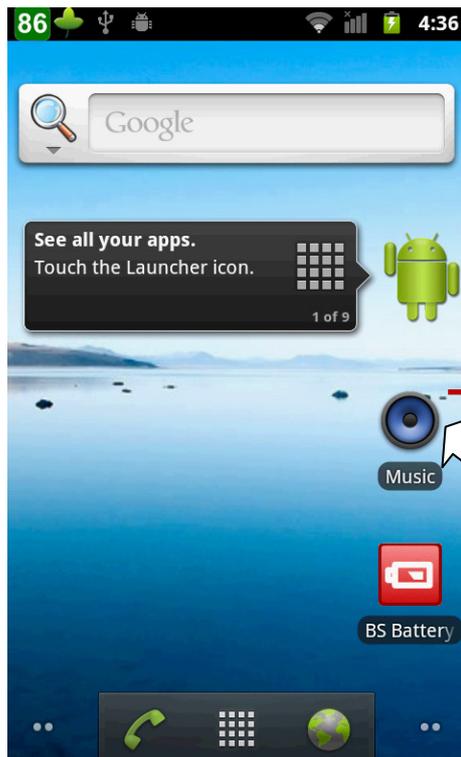

Touch & hold to


Slide two fingers apart or together to zoom in or out.

Drag or flick to scroll.



Touch Icon

Home, Manual, Back key, Search

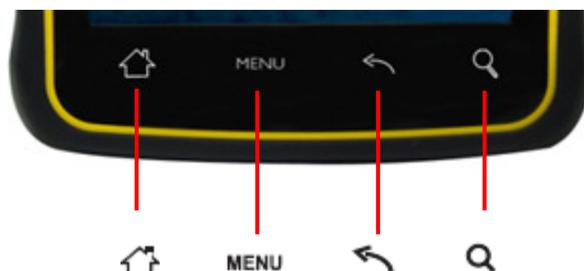

Touch Home  to close any menu or app and return to the home screen. On the home screen, touch and hold Home to show the most recent apps used, then touch an app to open it.

Touch Menu to open menu options.

Touch Back to go back.

Touch Search for text search, or touch and hold for voice search.

Power key menu

Press and hold Power for 5secs to open the power key menu, where you can turn off your E43xx (**Power off**), turn off all wireless connections and put the phone into low-power **Sleep** mode or turn **Flight mode** on/off or **Reboot the E43xx** .

Adjust volume

Press the volume keys to change ring volume (on the home screen) or earpiece volume (during a call).

When playing music or video files, press the volume keys to adjust media volume.



Rotate the screen

When you turn your E43xx, the touchscreen can rotate to stay right-side up:

Find it: Menu > **Settings** > **Display** > **Auto-rotate screen**

Quick tips

If you're not sure what to do next, try one of these:


See screen menu —Open a menu for the current screen	Touch Menu
See item options —Open an options menu (if available) for an item on the screen.	Touch & hold the item.
Start again —Go back to the home screen	Touch Home

Home screen

quick access to the things you need most


Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the E43xx or touch Home from a menu. It's basically like this:

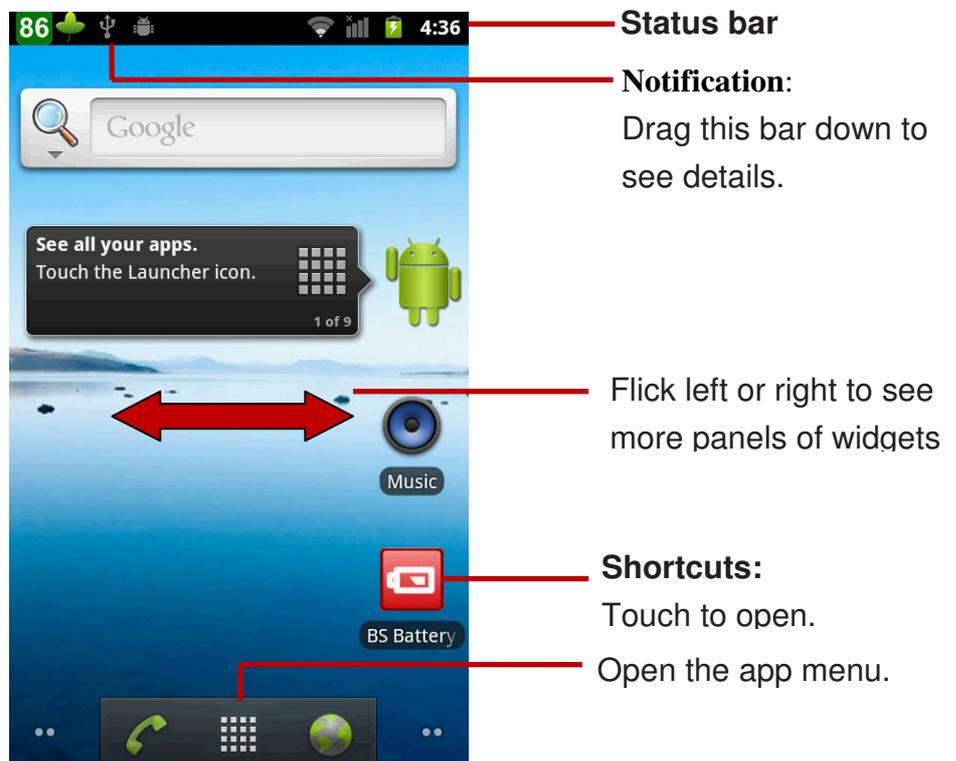

Search


Touch Search  , then use the window that appears.

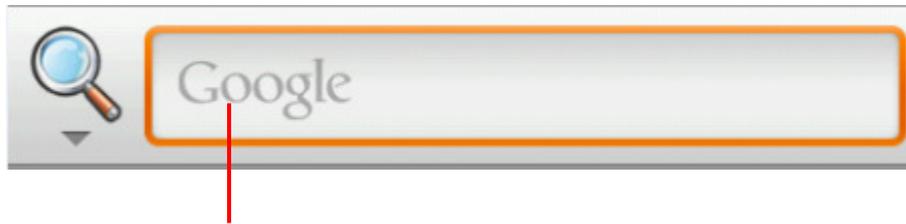

Touch here to enter text.

Smartphone status & notifications

Icons at the top of the screen notify you about messages and E43xx status. To view your notifications, touch the status bar and drag it down. Touch a notification to select it.

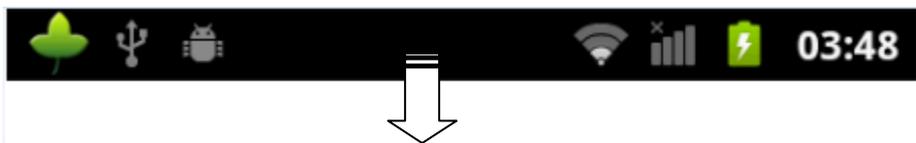

The table shows different icon's meanings.

	network (full signal)		3G (fastest data)
	network (roaming)		network (no connection)
	GPS active		warning
	Wi-Fi in range		Wi-Fi connected
	Bluetooth™ on		Bluetooth connected
	USB connected		sync
	active call		missed call
	flight mode		microSD card
	new text message		alarm set
	new email		calendar
	new voicemail		music
	vibrate		speakerphone on
	sound off		call mute
	battery (charging)		downloading
	battery (full charge)		

Apps & updates


get the app you want

Quick start: Apps & updates

You can find all of your apps in one place. From the home screen, touch  to open the app menu. To see all of your apps, flick up and down.

Browse & install apps

Get all the fun games and cool apps you want! There are a lot of free APPS which can be found on worldwide website, so you can find the app you want.

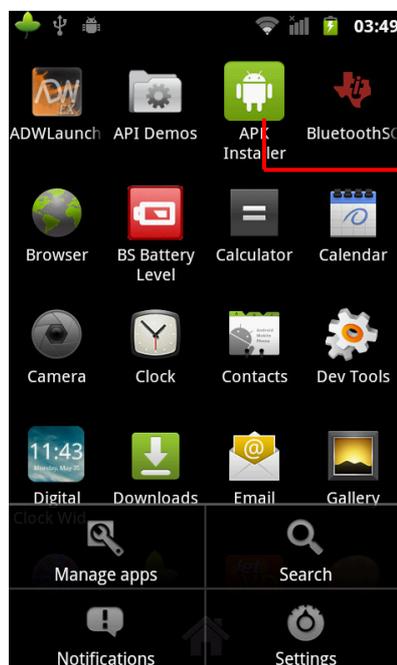


Use APK Installer to install new APPs

Recent apps

Your E43xx remembers the apps that you used most recently. From the home screen, touch and hold Home  to show the most recent apps used.

Manage & restore apps

From the home screen, touch  > **Manage apps**.

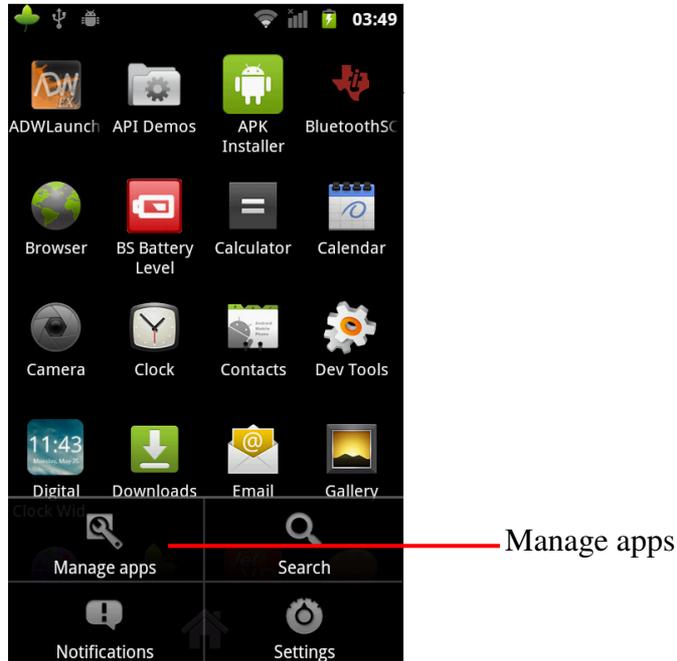

Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache** or other options.

Update E43xx

You can check, download and install E43XX software updates using your computer:

On your computer, go to www.winmate.com.tw and check the "Download Center" links. If an update is available, follow the installation instructions.

1. Download the update file and copy into Micro SD card in E43xx
2. Reboot (This might take few time, please wait till system boot successfully)
3. Erase the update file in E43xx

Messaging

sometimes it's best to text

Create messages

Find it:  >  Messaging > New message

Read & reply to messages

Find it:  >  Messaging > Message box

Note: Message box shows all of your messages together—text, email and social networking messages. To show only one type of message, touch a message type instead of **Message box**.

- To **open** a text message or social networking message and all of its replies, touch it.
- To **respond** to a message, just open it and enter your response in the text box at the bottom.
 - To **forward** a text message, touch and hold a message in the conversation, then touch **Forward message**. For email, touch to choose a reply or forward option.
- To open options, touch and hold a message.

Text entry

keys when you need them

Touchscreen keypad

You can open a keypad on your screen by touching a text box. To close the keypad, touch Back ↶.



Input methods

To select an input method, touch and hold a text entry area on the screen to open the **Edit text** menu. Touch **Input method**, then touch the method you want.

Text input settings

Find it: MENU Menu > **Settings** > **Language & keyboard**

- To edit your dictionary, touch **User dictionary**.
- To change the language and the style for your touchscreen keypad, touch **Select locale**.
- To change input method and settings, touch **Swype** or **Multi-touch keyboard**.

Photos & videos

see it, capture it

Photos

Take photos

Take that family photo and post it online for everyone to see.

Quick start: Music

Find it:  >  Music


Wireless

lose the wires

Quick start: Wireless

Connect your E43xx to fast Wi-Fi networks or Bluetooth™ devices.

To connect, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings** or **Bluetooth settings**.

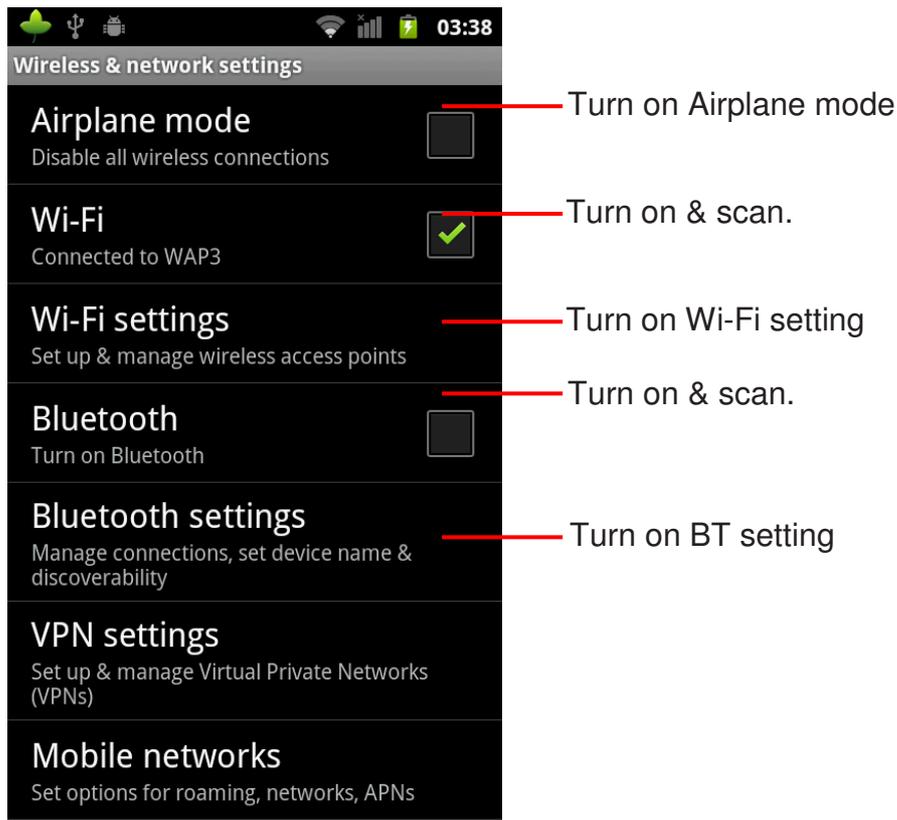

Wi-Fi networks

Turn Wi-Fi power on or off

Find it: Menu  > **Settings** > **Wireless & networks** > **Wi-Fi**

Note: To extend battery life, turn off Wi-Fi power when not in use.

Note: Wi-Fi is restricted to indoor use only.

Wi-Fi search & connect

When Wi-Fi is **turned on**, the Wi-Fi in range indicator  appears in the status bar when a network is available. Drag down the status bar and touch the **Wi-Fi networks available** notification to select and connect to a network.

To search for a network when Wi-Fi is **turned off**:

1 Touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

2 Touch **Wi-Fi** to turn on and scan. If Wi-Fi power is already on, touch Menu  > **Scan**. Your E43xx lists the networks it finds within range.

Tip: To see your E43xx 's MAC address or other Wi-Fi details, touch Menu  > **Advanced**.

3 Touch a network to connect. If necessary, enter **Network SSID**, **Security** and **Wireless password** and touch **Connect**.

When your E43xx is connected to the network, the Wi-Fi connected indicator  appears in the status bar.

Wi-Fi hotspot

You can make your E43xx a Wi-Fi hotspot to provide portable, convenient Internet access to other Wi-Fi enabled devices.

Caution: This application significantly impacts battery life. You may want to run this application with the charger connected.

Note: You need to subscribe to Wi-Fi hotspot service to use this feature. Contact your service provider. To set up your E43xx as a Wi-Fi hotspot:

1 Turn off Wi-Fi power by touching Menu  > **Settings** > **Wireless & networks** > **Wi-Fi**.

2 Touch >  **Mobile hotspot** > **Mobile hotspot** to turn on the hotspot.

3 Touch **Configure mobile hotspot** to change hotspot security and configuration settings:

- **Network SSID**—Enter a unique name for your hotspot and touch **Next**.
- **Security**—Select the type of security you want and touch **Save**: **WEP**, **WPA** or **WPA2**. Enter a unique password. Other users can access your Wi-Fi hotspot only if they enter the correct password.

Note: Keep it secure. To protect your phone and hotspot from unauthorised access, it is strongly recommended that you set up hotspot **Security** (**WPA2** is the most secure), including password.

- **Broadcast Channel**—Select a channel that minimises potential interference. You may need to try different channels if your hotspot has been active for some time.

4 Touch **Save** when the settings are complete. When your Wi-Fi hotspot is active, other Wi-Fi enabled devices can connect by entering your hotspot's **SSID**, selecting a **Security** type and entering the correct **Wireless password**,

Bluetooth™ hands-free devices

Turn Bluetooth power on or off

Find it: Menu  > **Settings** > **Wireless & networks** > **Bluetooth**

Note: To extend battery life, turn off Bluetooth power when not in use.

Connect new devices

Note: This feature requires an optional accessory. To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, just turn on the device.

1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

2 Touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings**.

3 Touch **Bluetooth** to turn on and scan. If Bluetooth power is already on, touch **Scan for devices**.

4 Touch a device to connect.

5 If necessary, touch **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth connected indicator

 appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction

and may be illegal. Always obey the laws and drive safely.

Reconnect devices

To automatically reconnect your E430xx with a paired device, simply turn the device on.

To manually reconnect your E430xx with a paired device, touch the device name in the **Bluetooth devices** list.

Disconnect devices

To automatically disconnect your E430xx from a paired device, simply turn the device off.

To manually disconnect your E430xx from a paired device, touch the device name in the devices list, then touch **OK**.