

The ring scanner configuration and SDK description

1 Configure bar code

1.1 Turn on/off the buzzer



1.2 Turn on/off the vibrator



1.3 Bluetooth scanning address pairing (Behind the BT is the bluetooth address)



1.4 HID and SPP switch



Scan head configuration. See the specific scanning head datasheet.

2, SDK (Based on v1.0.0.1)

The ring scanner supports two return instructions. You can send the appropriate instructions with PDA terminal through the Bluetooth SPP protocol.

“R1”(Character): Buzzer lasts two seconds

“R3”(Character): Vibrator lasts two seconds